

Молния

PRODUCT CERTIFICATE

ACHS-1 • VERSION 6.0




- 1 - hour hand
- 2 - minute hand
- 3 - second hand
- 4 - date
- 5 - winding crown

- 6 - minute counter
- 7 - hour counter
- 8 - stopwatch
- 9 - control button A
- 10 - control button B

DESCRIPTION, DISPLAYS AND FUNCTIONS

AChS-1 wrist watch. Version 6.0. is a watch with a chronograph function with a quartz mechanism.

1. SETTING THE CURRENT TIME

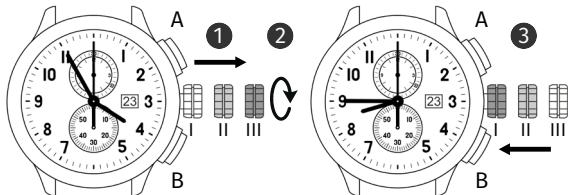

- 1* Pull out the winding crown to position III (the watch will stop).
- 2 Rotate the winding crown until the correct time is set at 08:45.
- 3* Return the winding crown to its original position I.


CAUTION

To set the time within the accuracy of a second, you need to:

- 1 Pull the winding crown out to position **III** when the second hand is at 60.

As soon as the hour and minute hands are in the correct position,
3 the winding crown must be returned to the starting position of the second hand.

2. SETTING THE CURRENT DATE

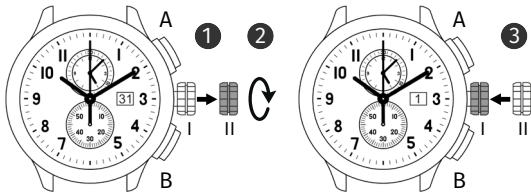

Setting the date (Quick mode)


- 1* Pull the winding crown out to position **II** (the watch continues to operate).

- 2 Rotate the winding crown counterclockwise until the correct date appears in the window.
- 3* Return the winding crown to its original position I.

CAUTION

When setting the date between 8.30 p.m. and midnight, the next day's date must be set.

Setting the date / time

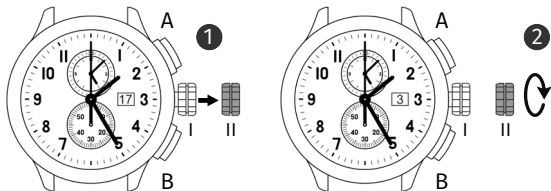



Example:

- date/time on the clock: **17** / 1:25 a.m. till noon
- current date/time: **4** / 8:30 p.m.

** please make sure that the a.m. / p.m. mode is observed when setting the time.

3. CHRONOGRAPH USE

Chronograph: basic functions

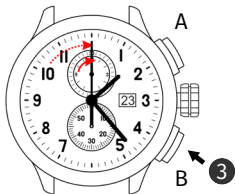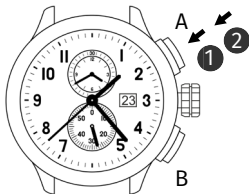


Start / Stop / Reset

Example:

1. Start: Press button A.
2. Stop: To stop the count, press button A again and read the chronograph reading for 4 hours/20 minutes/38 seconds.
3. Reset:  Press button B (the chronograph hands will return to their original position).

Chronograph: adding time intervals

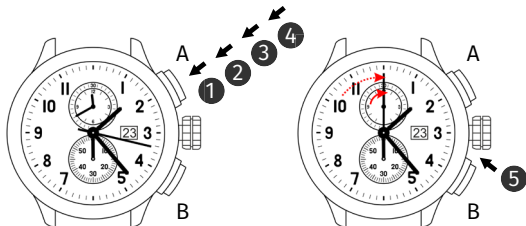

Example:

➊ Start: (start time count).

➋ C2. Stop: (e.g., 15 min 5 sec, then step ➊).

➌ Restart: (count resumed).


➍* Stop: (e.g. 5 min 12 sec, step ➋) = 20 min 17 sec). The total time count will be displayed.

➎ Reset:  chronograph hands will return to their original position.

CAUTION

*If you repeat step 4, the time intervals will continue to add if you continue to press button A. (Restart/Stop, Restart/Stop, ...).

Chronograph: timespan or interval counting

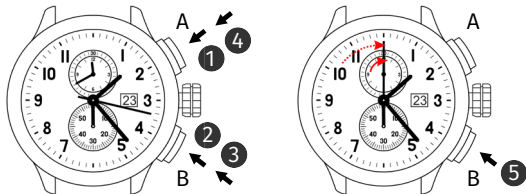

Example:

- ➊ Start: (start of the count).
- ➋ Display of the time interval: e.g. 20 min. 17 sec. (the count will continue in the background).
- ➌ Locking the measured time: (the chronograph hands will immediately move to the current measured time).


- 4 Stop: (the stop time is displayed).
- 5 Reset:  chronograph hands will return to their original position.

CAUTION

* Step 3 The following intervals or time spans can be displayed when button B is pressed again (displaying the interval/locking the measured time...).

4. HAND ADJUSTMENT

Adjusting the position of the chronograph hands (returning to zero position)

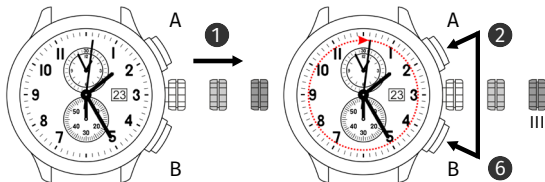

Example:

One or more of the chronograph hands are in the wrong (other than zero) position and must be adjusted (e.g. after replacing the battery).

- 1 Pull the winding crown out to position **III** (all chronograph hands are in the correct or incorrect (other than zero) position).
- 2 Hold down button A and button B for at least 2 seconds simultaneously (the stopwatch hand rotates 360 degrees: the adjustment mode is activated).



↓ Adjusting the stopwatch hand

Once ↗ 1x briefly

For a long time ↗ long




↓ Adjusting the next hand ↗

↓ Adjusting the minute and hour counter hands
(mechanically linked)

Once ↗ 1x briefly

For a long time ↗ long



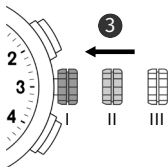

- 3** The winding crown returns to its original position I. End of chronograph hand position adjustment (can be done at any time).

INSTRUCTIONS FOR USE, CARE AND STORAGE

1. WATER RESISTANCE

The watch is water resistant to 10 ATM, a standard specification which means the watch can withstand a pressure of 10 atmospheres. These watches are resistant to splashes, rain, and you can wash your hands wearing the watch. You can swim while wearing the watch and it can be submerged in water. However, these watches are not suitable for scuba diving. Please note that the winding crown must not be pulled out of the watch and the control buttons must not be pressed when the watch is wet.

2. BATTERY

The battery life is expected to be from 1 year to 4.5 years. If you do not intend to wear the watch for several weeks or months, we

recommend pulling the winding crown out to position III. This will extend the battery life. At the end of its service life, the battery must be removed immediately and replaced in an authorized service center.

3. CARE

We recommend that you clean your watch regularly (apart from the leather strap) with a soft cloth moistened with warm soapy water.

4. PRECAUTIONS

- Never attempt to open the case or remove the back cover yourself.
- The rubber seals protecting the watch from water and dust are to be replaced every 2-3 years.
- If any moisture gets inside the watch, immediately have its condition checked by an authorized service center.
- Do not expose the watch to extreme temperatures.
- Do not handle the watch roughly (shocks, drops etc.).
- Do not fasten the strap too tight. There should be a finger-wide gap between the wrist and the strap.
- The watch should be stored in a dry place.

- Keep the watch away from gasoline, cleaning solvents, aerosols from sprayers, adhesives, paints, etc. Chemical reactions caused by these materials can damage the seals, the case and finish of the watch.
- The sapphire crystal is strong, but it may crack if the watch falls or receives shock.
- Avoid storing your watch with jewelry containing diamonds, as these can damage the sapphire crystal.
- Store your watch in a separate, preferably specially designed case, lined with a soft protective material.

TECHNICAL SPECIFICATIONS

Case diameter	44 mm
Case material	Steel 316L
Strap width	22 mm
Type of glass	Sapphire crystal
Movement mechanism	Ronda 3520.D quartz mechanism
Accuracy	-10 / +20 seconds per month
Battery type	392
Standard battery	up to 54 months

WARRANTY CONDITIONS

In accordance with Resolution of the Government of the Russian Federation of 27.05.2016 No. 471 On Amendments to Certain Acts of the Government of the Russian Federation on the Return or Exchange of Technically Complex Goods, this product belongs to the category of technically complex goods, which are not subject to the requirement of the buyer to provide him or her with a similar item free of charge for the period of repair or replacement, and which are not subject to return or exchange for a similar item of a different size, shape, size, shape, style, color or configuration.

The warranty only applies to products purchased from authorized sales outlets.

The manufacturer's warranty is 1 (one) year from the date of the product's sale. The warranty covers defects and errors in the assembly materials. In the event of a fault within the warranty period, the manufacturer undertakes to eliminate any faults or malfunctions free of charge. If the repair fails to return the watch to its previous quality, the manufacturer guarantees that it will replace the watch with another of the same model or a model with identical characteristics. Repairs should only be carried out in authorized

service centers. The contacts of authorized service centers are provided by an authorized sales representative.

EXCEPTIONS

The warranty does not cover:

- battery life;
- the glass and strap;
- defects in the watch caused by its use (e.g. scratches on the glass, changes in color and/or material of non-metallic belts and bracelets, etc.);
- any damage to any part of the watch caused by misuse, neglect, or carelessness (shock, potholes, dents, cracks, etc.);
- any unauthorized repair or unauthorized interference with the watch interior and/or exterior means that the warranty is automatically no longer valid.

WARRANTY CARD

All warranty repair claims must be accompanied by a warranty card filled in by both the buyer and the seller of the watch.

SERIAL NUMBER _____

DATE OF SALE _____

SELLER

Name of trading organization

Address and telephone number of trading organization

PLACE FOR STAMP _____ BUYER

I have read and agree with the operating instructions.

I have no complaints concerning the external
appearance or performance of the watch.

**WARNING! THE WARRANTY CARD IS NOT VALID WITHOUT
THE SELLER'S STAMP!**

Name of the authorized service center

The following work has been performed to repair the watch:

Service centre employee

Date

(Signature, full name)

(Signature, full name)

Owner

Date

(Signature, full name)

(Signature, full name)

8 351 700 13 79

25 Zwilling Street, Chelyabinsk,
454091 Russian Federation

sales@molnija.shop
www.molnija.shop

Молния